

NOTE: Remove Backpad from the spindle before installing Toolrest.

STEP 1

Loosen the bottom set-screw with the provided key and detach the toolrest from its base.



STEP 2

Position the base of the toolrest within the hood of your Jooltool as shown. (Parallel with the black "lip" of the Jooltool).



STEP 3

Screw the base of the toolrest to the hood of the Jooltool with the provided screws. A drill with a "Phillips" driver ("x") is recommended.



STEP 4

Replace the Toolrest onto its base and tighten the set-screw.




STEP 5

Use the Toolrest to achieve exact & repeatable angles on your favorite tools.




ANGLE

Simply rotate the toolrest table on its horizontal axis to set the desired angle. Tighten the hex-screw for a secure setting.

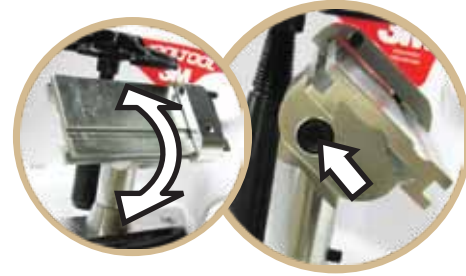


WIDTH

Loosen the set-screw. Move the guide into the desired position. Tighten the set-screw.

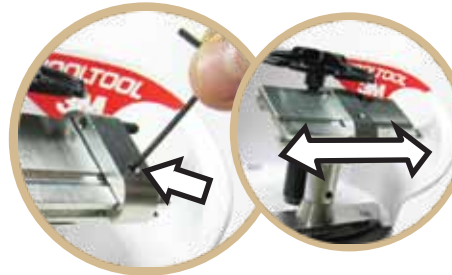

ROTATION

Loosen the bottom set-screw. Rotate the Toolrest on its vertical axis to the desired position. Tighten the bottom set-screw.

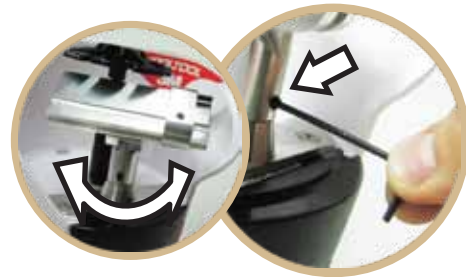

SKEW

Screw the adjuster inward for a deeper angled skew or unscrew until flush with the guide for a straighter chisel.

